

## SAFETY CERTIFICATE AND RESTRICTIONS ON USE

### RUNNING DEER, STATICS AND RUNNING BOAR

1. Access into and out of Stickledown Range is restricted during firing except on Running Boar.
2. Access to the top of the stop butt on Melville or Winans for maintenance is prohibited during firing.
3. Firers on Melville and Winans must not move beyond the target line during firing on these three ranges.
4. When the Statics range is in use, Running Deer and Running Boar must check fire during target inspection or changing.
5. No movement is allowed forward of the firing point on any of the three ranges whilst firing is in progress.
6. Movement into and out of the bunkers is forbidden on any of the three ranges whilst firing is in progress.



M J HAGUE  
RO 2  
for GOC

14 May 1996